

Dyna Doctor

Installation Manual

Ver. 1.0

1 July 2013

– CONTENTS –

- 1. OVERVIEW..... 3**
- 2. SYSTEM REQUIREMENTS 3**
- 3. INSTALLING / UNINSTALLING OF THE DYNA DOCTOR..... 4**
 - 3.1 INSTALLATION 4
 - 3.1.1 LANGUAGE SELECTION(VRF AND DI/SDI/IMS SOFTWARE ONLY) 4
 - 3.1.2 .NET FRAMEWORK INSTALLATION..... 5
 - 3.1.3 INSTALLATION PREPARATION 6
 - 3.1.4 WELCOME 7
 - 3.1.5 LICENSE AGREEMENT 8
 - 3.1.6 CUSTOMER INFORMATION 9
 - 3.1.7 DESTINATION FOLDER.....10
 - 3.1.8 CHANGE CURRENT DESTINATION FOLDER.....11
 - 3.1.9 READY TO INSTALL THE PROGRAM12
 - 3.1.10 INSTALLING SOFTWARE13
 - 3.1.11 COMPLETED14
 - 3.2 UNINSTALLATION15

1. Overview

"DynaDoctor" software analyses data sent from the Dynakit, and supports the status display of outdoor and indoor units of VRF, DI/SDI/IMS System, Hydro Unit and outdoor unit of ESTIA, kWSmart System. This tool can be used to check refrigerant cycle data, display various data graphs, execute indoor unit test runs and create reports of test run results.

Furthermore, received data can be saved and browsed, and secondary use of data can be carried out easily.

2. System requirements

The system requirements for this software are as follows,

Item	Specifications
OS	Windows XP SP2 or later, Vista, 7
Microsoft .NET Framework	2.0 3.0 3.5
Office System	Office 2003,2007,2010

The following runtime library is installed when Selection Tool 2010 is installed:

☐☐☐Microsoft ® .NET Framework 2.0 with SP23.0, 3.5

- "Windows XP", "Windows Vista" and "Windows 7" are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Adobe, the Adobe logo, Reader, and Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- InstallShield is either a registered trademark or trademark of Flexera Software Inc. in the United States and/or other countries.
- All other company and product names are either registered trademarks or trademarks of the respective owners. In this manual such names are not indicated by ™, ® or © marks.

3. Installing / Uninstalling of the Dyna Doctor

This section describes installation and uninstallation procedures of the Dyna Doctor.


3.1 Installation

Insert the installation CD/DVD into the CD/DVD drive. On the displayed window, click the [Install] button of “Dyna Doctor” software. Setup will be started. Or double-click “Setup.exe”.




3.1.1 Language Selection(VRF and DI/SDI/IMS Software only)

Choose a language to be used and click [OK]. The selected language is used hereafter in the Software. Selectable languages are Japanese or English

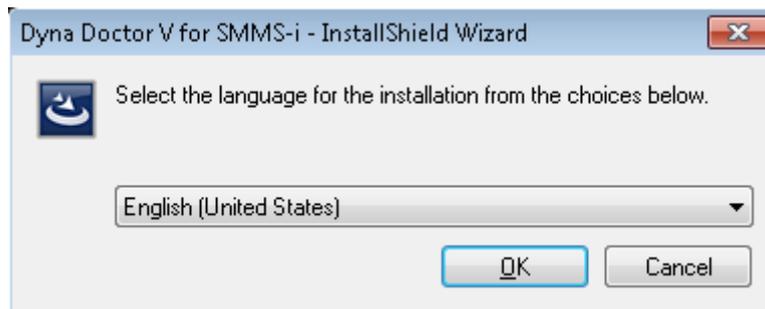


3.1.2 .Net Framework installation

When the required program(.Net Framework) is not installed, the following window will be displayed.

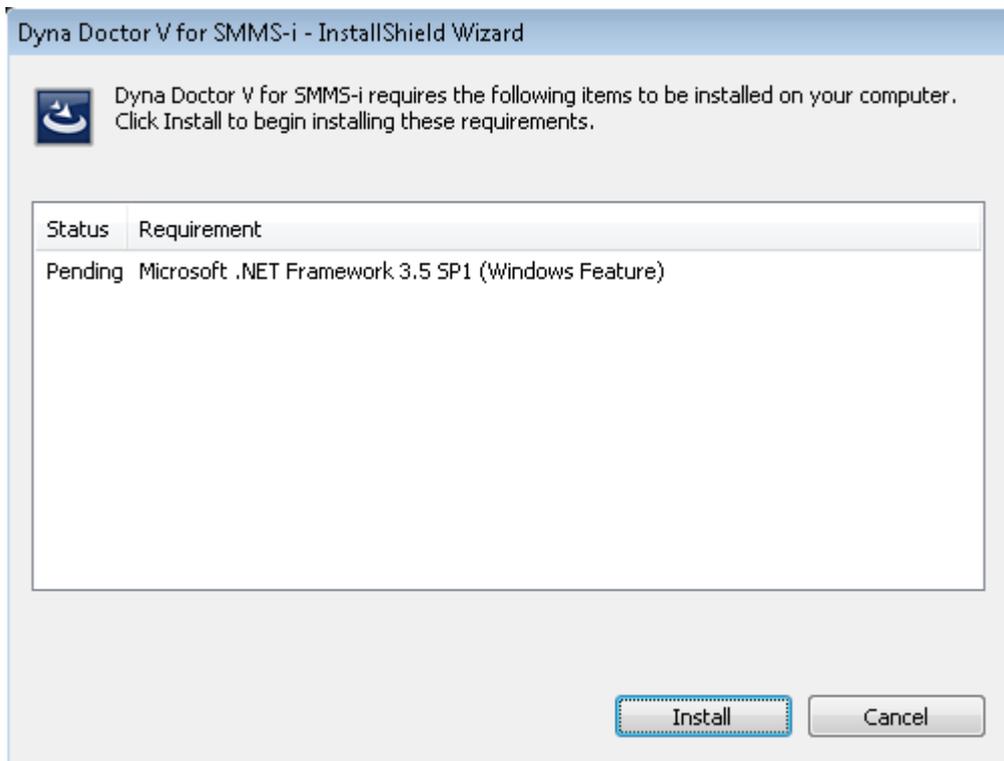


Follow the instructions on the screen and confirm the installing program. Click [Install] to install the required program.

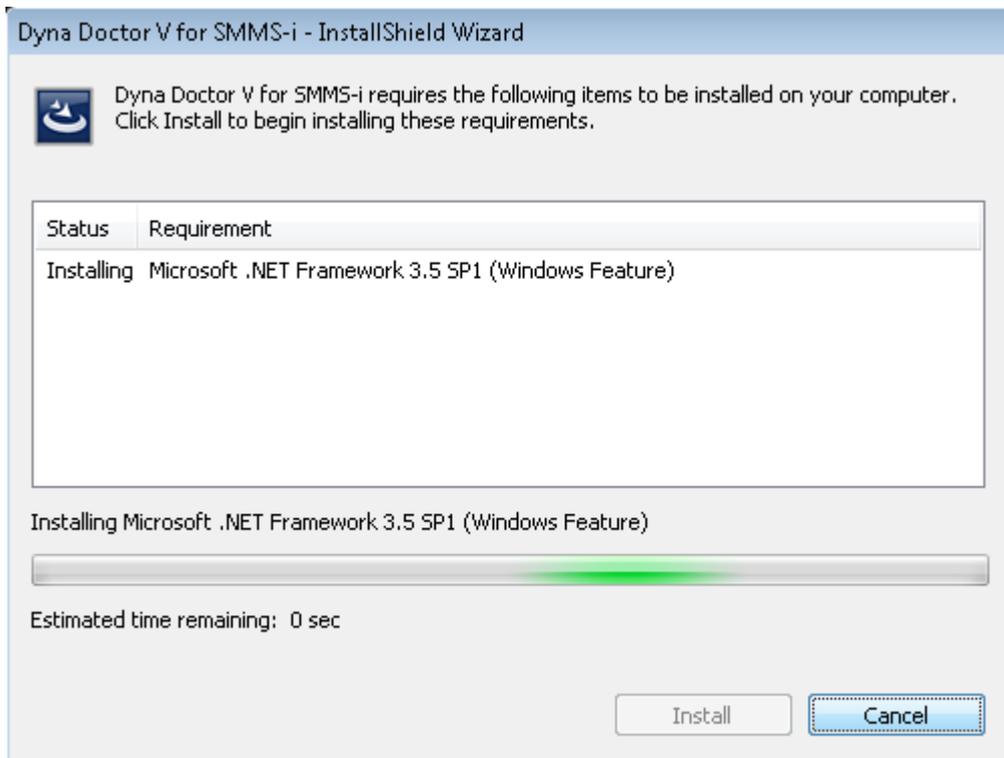

3.1.3 Installation preparation

The installation preparation starts. Wait for a while until the preparation is complete.

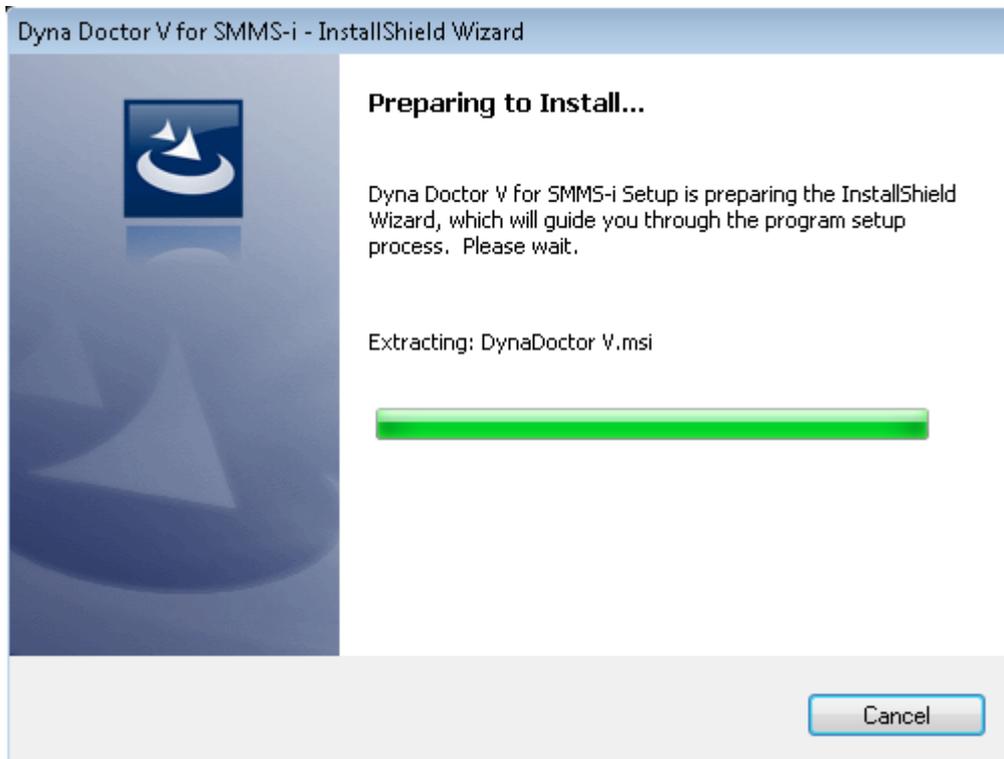

3.1.4 Welcome


When installation preparation process has completed, the Welcome window opens.

Click 'Next >'.



3.1.6 Customer Information

The Customer Information window is displayed. Enter 'User Name' and 'Organization'. And Click 'Next >':

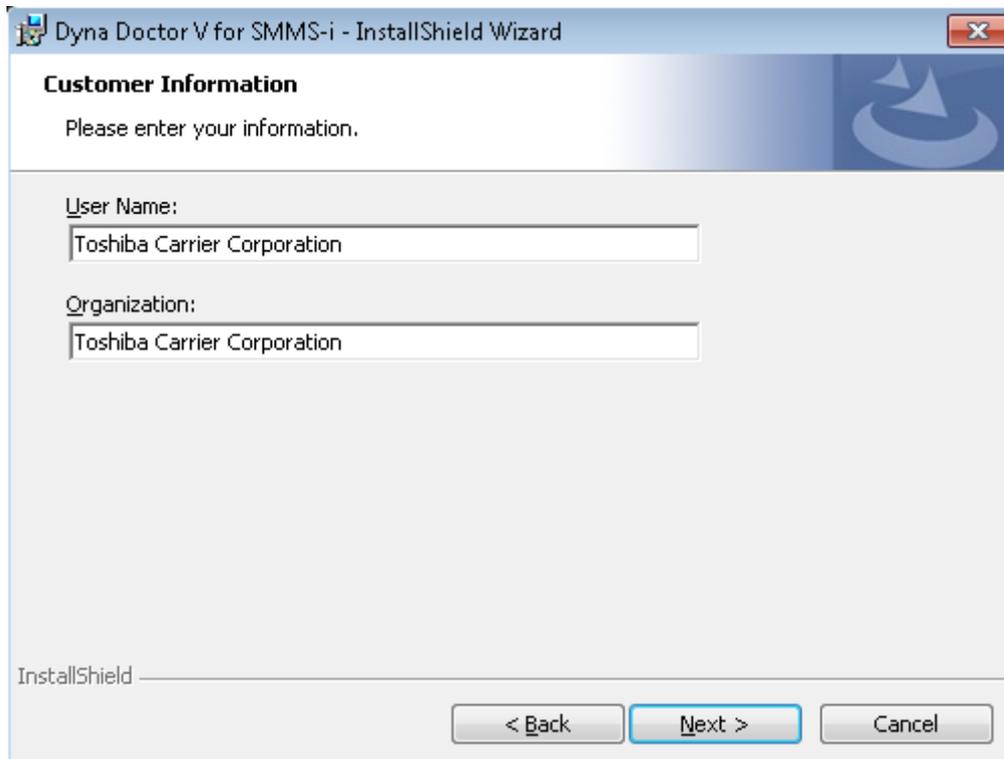


The screenshot shows a Windows-style dialog box titled "Dyna Doctor V for SMMS-i - InstallShield Wizard". The window has a blue header bar with the title and a close button. Below the header, the text "Customer Information" is displayed in bold, followed by "Please enter your information." and a blue circular arrow icon. The main area contains two text input fields: "User Name:" with the value "Toshiba Carrier Corporation" and "Organization:" with the value "Toshiba Carrier Corporation". At the bottom, there are three buttons: "< Back", "Next >" (which is highlighted with a blue border), and "Cancel". The "InstallShield" logo is visible in the bottom left corner of the window.

3.1.7 Destination Folder


The Installation Folder window is displayed. If the installation folder is correct, click 'Next >':

If you want to change the installation folder, click 'Change':

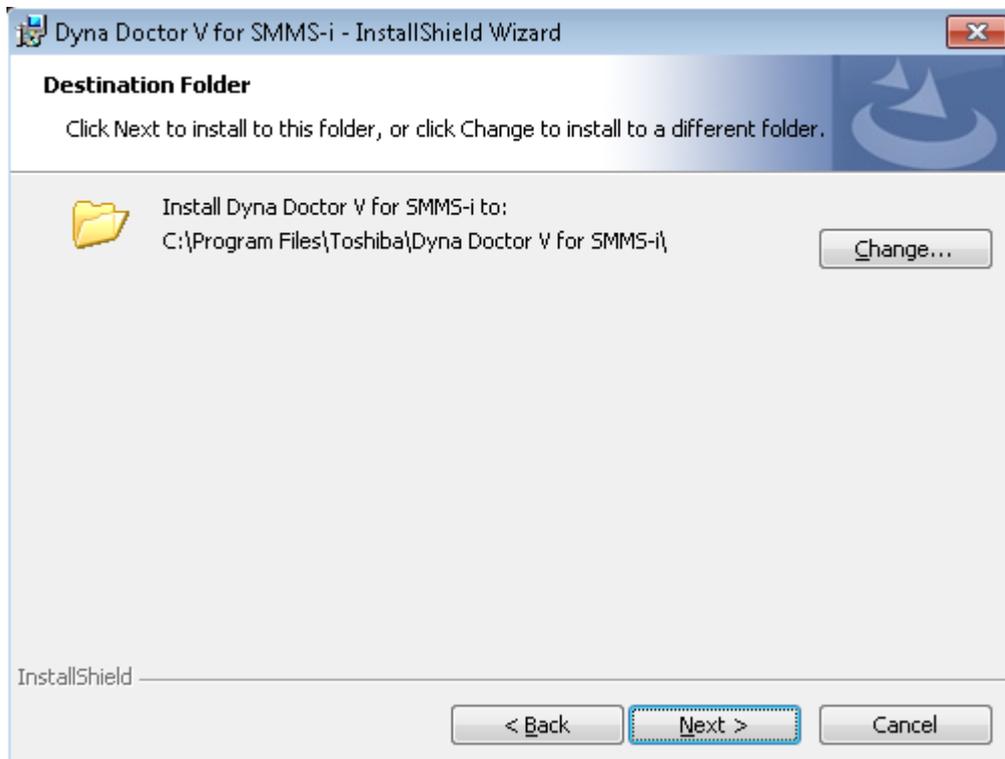


3.1.8 Change Current Destination Folder

The following Change Current installation folder window is displayed. Choose or enter installation folder. And Click 'OK'.

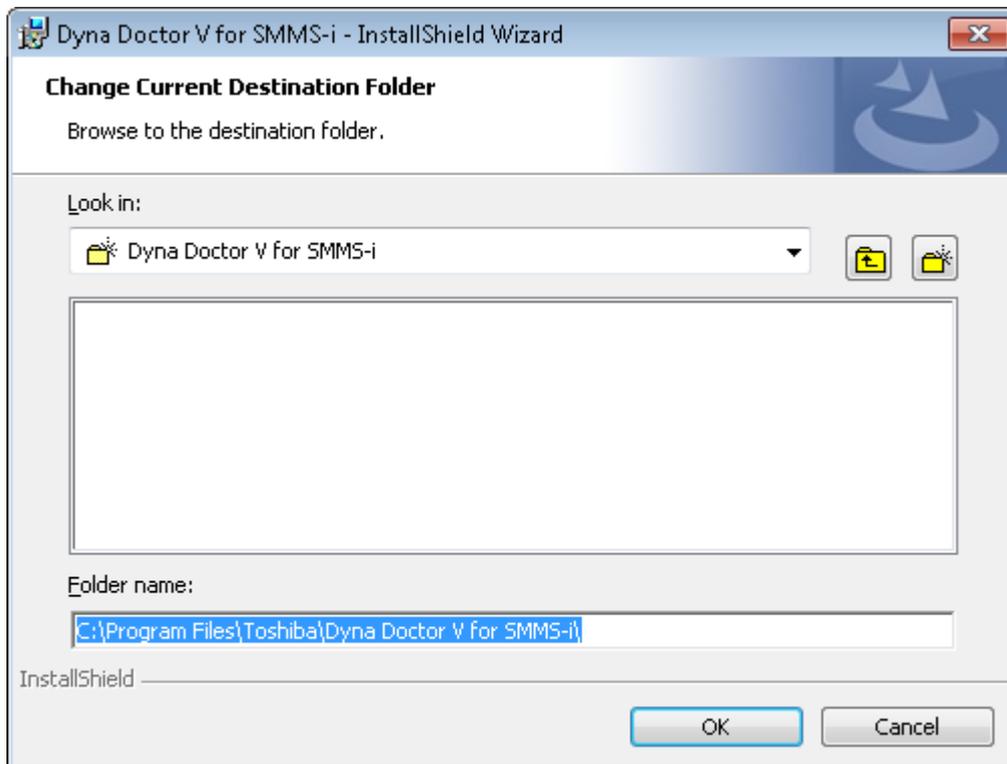


3.1.9 Ready to Install the Program

Ready to Install the Program window is displayed. Click 'Install'.

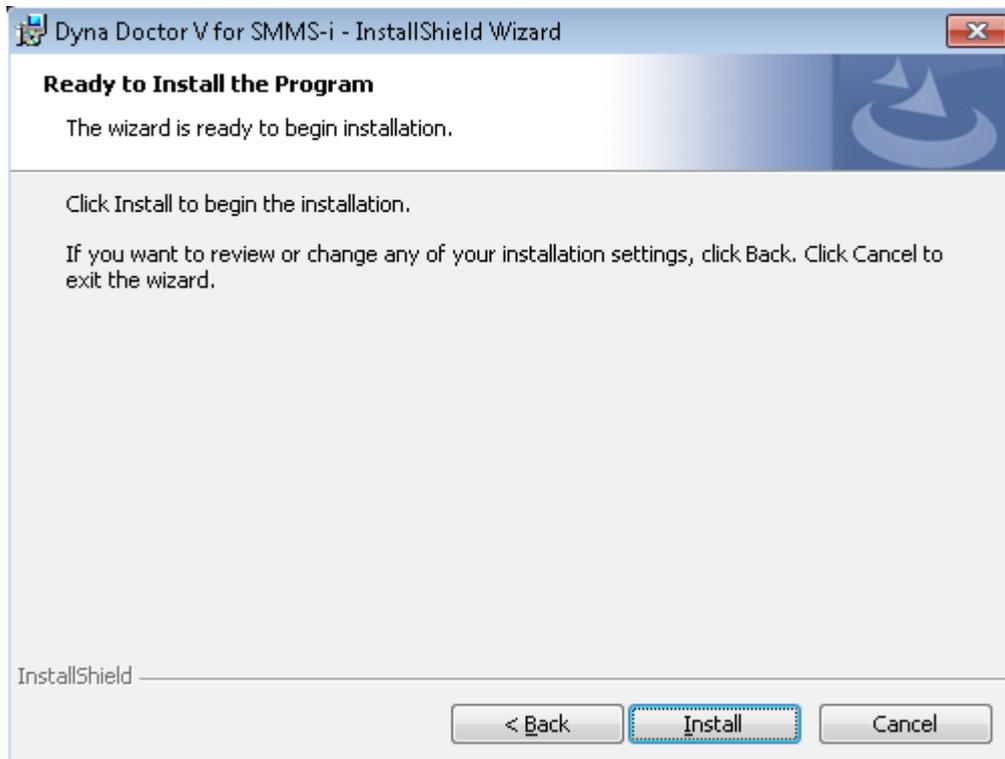


3.1.10 Installing Software

The following window appears showing that the program is being installed. Wait for a while.

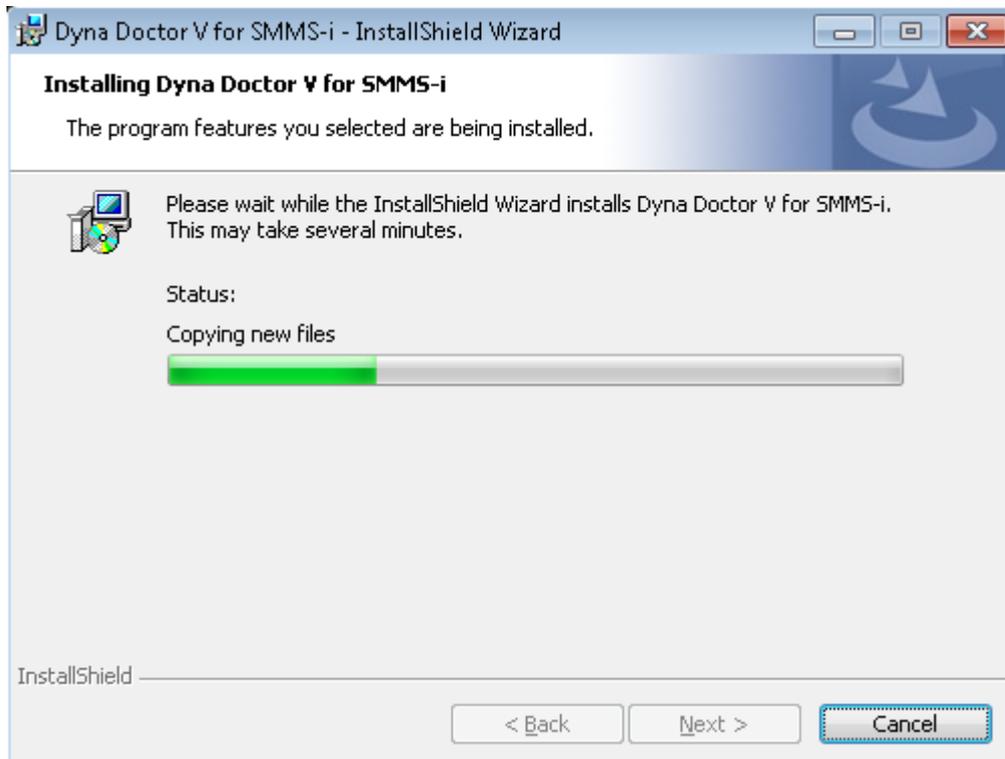

3.1.11 Completed


When the installation is finished, the following window opens. Click 'Finish' to exit the installer.

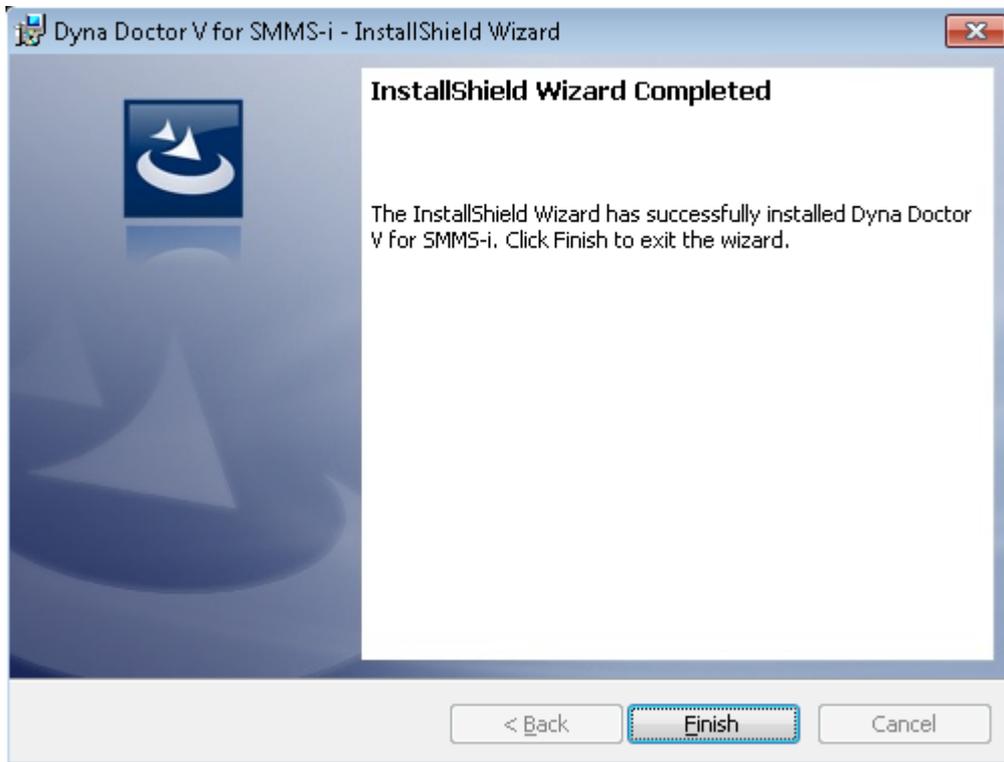


3.2 Uninstallation

If the Setting File Creation Software is running, exit the application.


Select 'Dyna Doctor' on the Add or Remove Programs window in the Control Panel within Windows. And click 'Remove'.

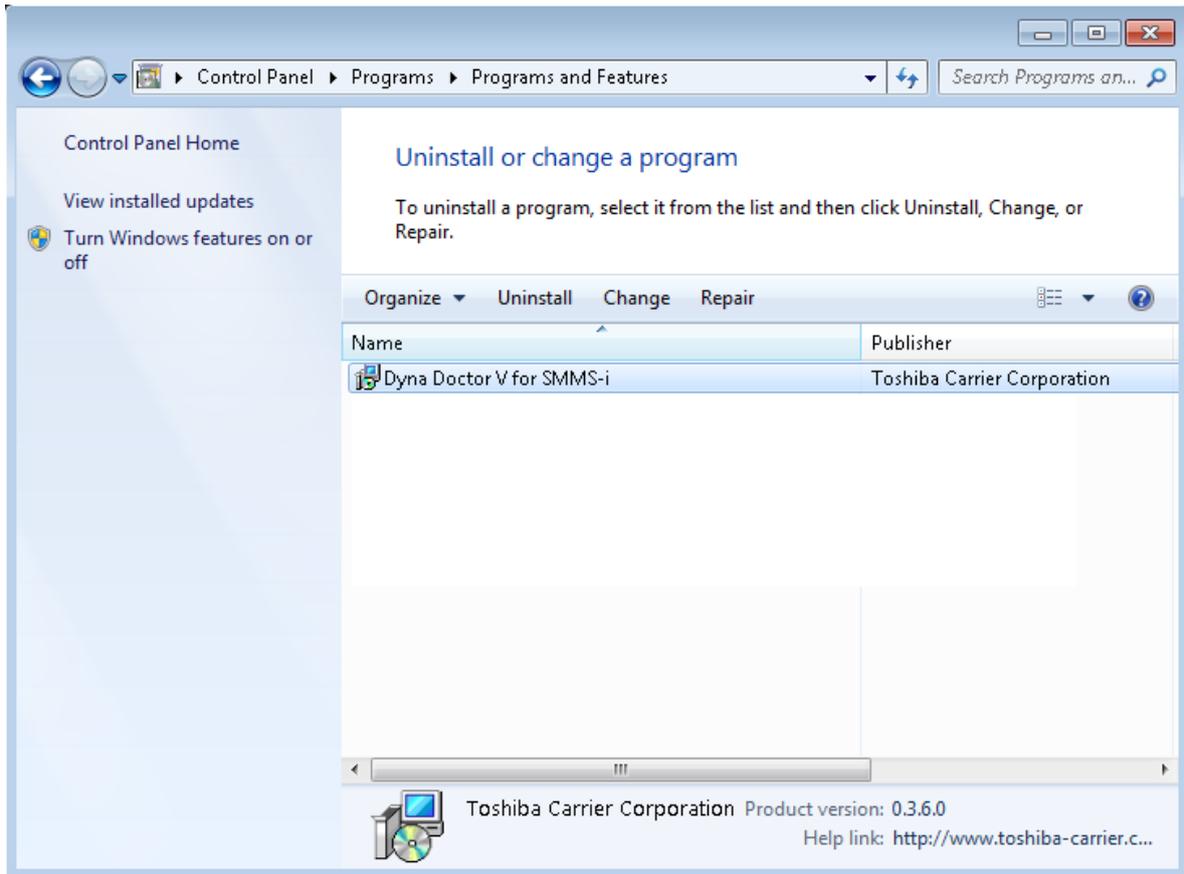

The following confirmation dialog box appears. Click 'Yes'.

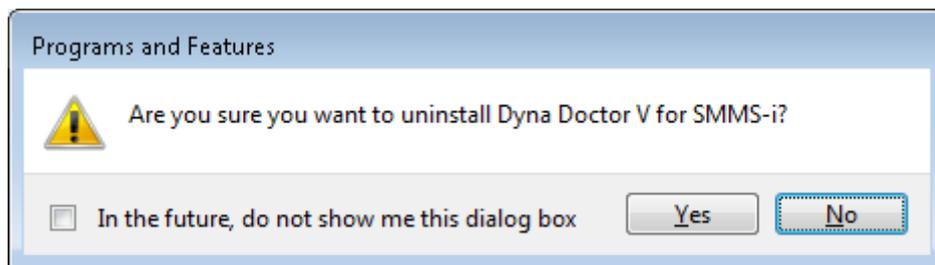

The following window appears. Wait for a while.

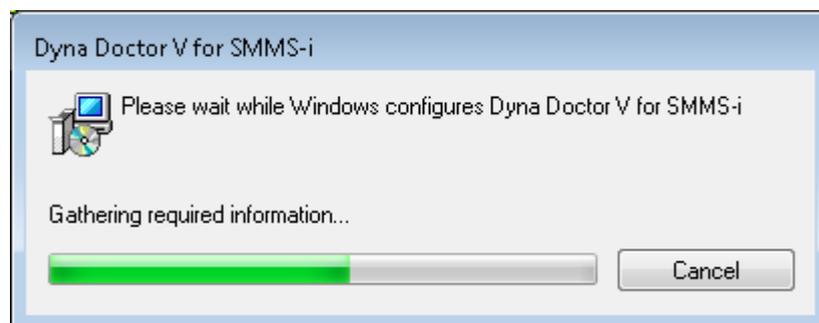

When the uninstallation is finished, this window will close automatically.